

Cluster HAT / Cluster CTRL

How do I disable automount in Raspberry Pi OS (Bullseye with GUI)?

Create a file `~/.config/pcmanfm/LXDE-pi/pcmanfm.conf` for the "default" user (the one created when installed) with the following contents.

```
[volume]
mount_on_startup=0
mount_removable=0
autorun=1
```

After a reboot USB disks/etc. will not be automatically mounted anymore.

Unique solution ID: #1121

Author: n/a

Last update: 2023-07-16