

Cluster HAT / Cluster CTRL

How do I enable autologin on TTY running on the Controllers serial port [Raspbian Stretch]?

To enable auto logins on the TTY running on any serial port on the Controller log in and run the following command and reboot.

```
sudo sed -i "s#agetty --keep-baud#agetty --autologin pi --keep-baud#" /lib/systemd/system/serial-getty@.service
```

And to disable it run the following command and reboot.

```
sudo sed -i "s#agetty --autologin pi --keep-baud#agetty --keep-baud#" /lib/systemd/system/serial-getty@.service
```

To login automatically using a different username replace the "pi" username in the above commands.

When enabling this all users with access to the Controller Pi serial port will be able to log in without any authentication.

Unique solution ID: #1089

Author: n/a

Last update: 2019-09-09