

# Cluster HAT / Cluster CTRL

## How do I enable autologin on TTY running on the Controllers serial port [Raspbian Stretch]?

To enable auto logins on the TTY running on any serial port on the Controller log in and run the following command and reboot.

```
sudo sed -i "s#agetty --keep-baud#agetty --autologin pi --keep-baud#" /lib/systemd/system/serial-getty@.service
```

And to disable it run the following command and reboot.

```
sudo sed -i "s#agetty --autologin pi --keep-baud#agetty --keep-baud#" /lib/systemd/system/serial-getty@.service
```

To login automatically using a different username replace the "pi" username in the above commands.

**When enabling this all users with access to the Controller Pi serial port will be able to log in without any authentication.**

Unique solution ID: #1089

Author: n/a

Last update: 2019-09-09