

Linux

How do I set/reset the linaro users password?

If you haven't previously changed the linaro users password the default is "linaro", so you can reset the password by issuing the following command.

```
passwd
```

And enter the old password and then repeat the new password to set your new password.

If you do not currently know the password (but have been automatically logged in) you can reset the password via

```
sudo passwd linaro
```

This will allow you to reset the password without knowing the existing password.

Unique solution ID: #1064

Author: Chris Burton

Last update: 2014-12-16 22:10