

# Computers

## How do I stop X from starting on boot on the Iteaduino Plus?

From the console you can disable X at startup by issuing the following command.

```
sudo mv /etc/init/lightdm.conf /etc/init/lightdm.conf.disabled
```

And then reboot the board.

You will then find you no longer have the X graphical system running and an extra ~100MB of memory to use.

If you wish to re-enable X at startup run the following to "undo" it.

```
sudo mv /etc/init/lightdm.conf.disabled /etc/init/lightdm.conf
```

And again following a reboot the service will be re-enabled.

Unique solution ID: #1062

Author: n/a

Last update: 2014-12-16 22:09