

# Computers

## How do I set/reset the Iteaduino Plus root users password?

When logged in as "linaro" you can reset the root password with the following command

```
sudo password
```

You will then be able to enter a new root password, you will then be able to login directly via SSH/etc. as the root user.

Unique solution ID: #1063

Author: Chris Burton

Last update: 2014-12-16 22:10